



rev 1.3
8/20

SPARE PARTS

HYDRAULIC ROTARY VANE COMPRESSORS




HKL 2600/8-65
HKL 2600/8-65-O-PE

HKL 2600/8-82
HKL 2600/8-82-O-PE

SPARE PARTS


MAIN COMPONENTS	3
1. COMPRESSOR BLOCK	4
1.1. OIL CHAMBER ASSEMBLY	6
1.2. ROTOR & STATOR ASSEMBLY	8
1.3. VALVES	10
1.4. OIL SEPARATOR ASSEMBLY	12
1.5. OIL COOLER ASSEMBLY	14
2. DRIVE KIT	16
3. O-PE SWITCH	18
4. MAINTENANCE KITS	20
4.1. GENERAL	20
4.2. ROTOR - STATOR	21
4.3. OIL SEPARATOR	22
4.4. VALVE ASSEMBLY	23

MAIN COMPONENTS

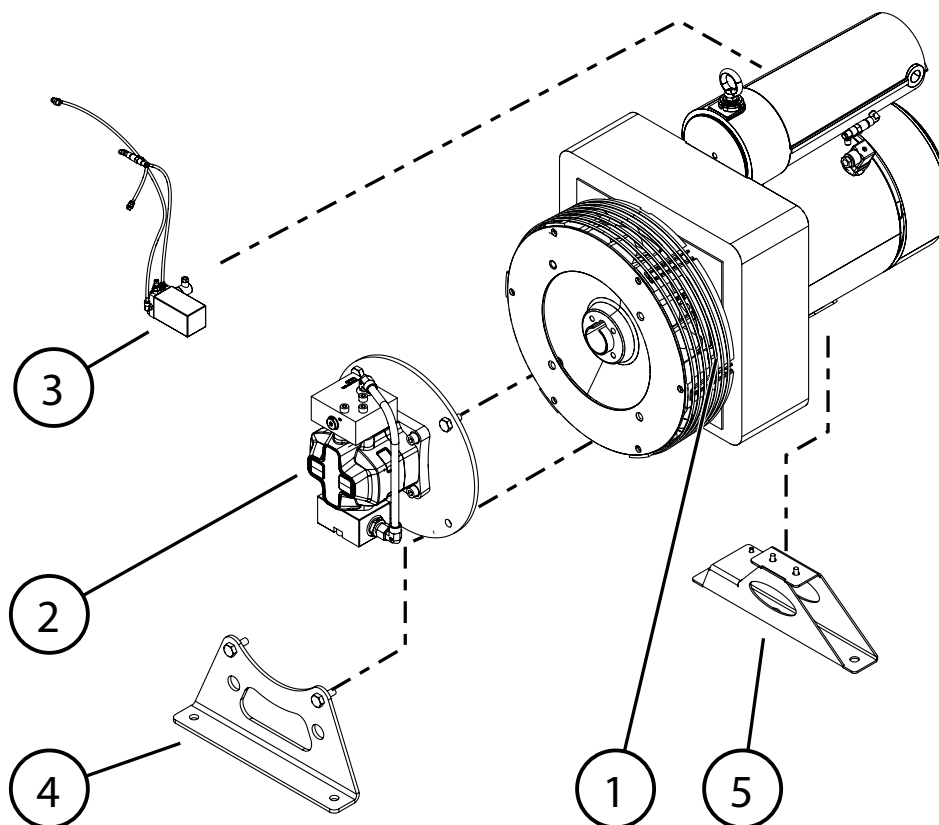

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
1	V106 2600 00		COMPRESOR BLOCK ASSEMBLY		Separate Part list
2	V106 2600 95 V106 2600 97		DRIVE KIT	HKL2600/8-65 HKL2600/8-82	Separate Part list
3	V106 2600 70		O-PE-SWITCH		Separate Part list
4	V106 2600 65		FRONT BRACKET KIT	Includes screws	
5	V106 2600 66		REAR BREACKET KIT	Includes screws	

1. COMPRESSOR BLOCK

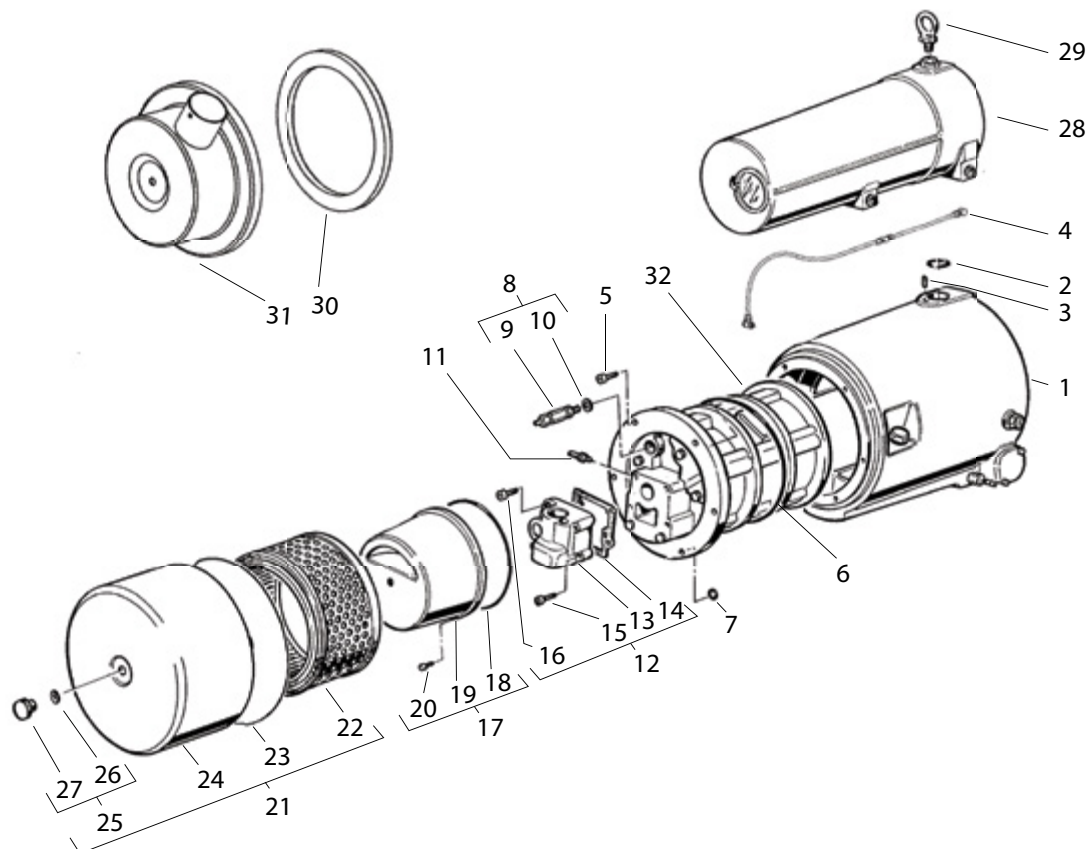

	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
	V106 2600 00		COMPRESSOR BLOCK ASSEMBLY		Includes pos. 1-32
1	*	1	OIL CHAMBER		Separate part list
2	* ³	1	O-RING	32.99x2.62	Available in O-ring Kit A
3	V106 2600 76	1	PIN		
4	V106 2600 40 ³		PIPE KIT		
5	*	6	SCREW	M8x20	Available in Screw Kit C
6	* ²	1	O-RING	190.18x2.62	Available in O-ring Kit A
7	* ²	1	O-RING	7.66x1.78	Available in O-ring Kit A
8	V106 2600 04	1	RELIEF VALVE KIT		Includes pos. 9-10
9	*	1	RELIEF VALVE		
10	* ^{2, 4}	1	USIT		
11	V106 2600 05 ^{2, 4}	1	SILENCER		
12	V106 2600 06	1	VALVE BLOCK ASSEMBLY		Includes pos. 13-16 Separate part list
13	*	1	VALVE ASSEMBLY		
14	V106 2600 07 ^{2, 4}	1	GASKET		
15	*	2	SCREW	M8x50	

SPARE PARTS

	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
16	*	2	SCREW	M8x20	
17	V106 2600 03		VALVE COVER KIT		Includes pos. 18-20
18	V106 2600 08 ^{2, 4}	1	O-RING	164.77x2.68	Available in O-ring Kit A
19	*	1	COVER		
20	*	3	SCREW	M5x16	
21	V106 2600 02		INTAKE FILTER COVER KIT		Includes pos. 22-27
22	V106 2600 01 ¹	1	INTAKE FILTER ELEMENT		
23	*	1	SUPPORT PLATE		
24	*	1	COVER		
25	V106 2600 09		INTAKE FILTER MOUNTING KIT		Includes pos. 26-27
26	* ¹	1	GASKET		
27	*	1	KNOB	M8	
28	V106 2600 10		OIL SEPARATOR ASSEMBLY		Separate part list
29	V106 2600 11	1	LIFTING EYE		
30	V106 2600 49	1	GASKET		
31	V106 2600 48	1	FILTER COVER		
32	V106 2600 23		ROTOR & STATOR ASSEMBLY		Separate part list
	V106 2600 12		O-RING KIT A	1x 32.99x2.62 1x 190.18x2.62 1x 7.66x1.78 1x 164.77x2.68	Includes pos. 2, 6, 7, 18
	V106 2600 31		SCREW KIT C	6x M8x20 10x M10 Spring Washer 10x M10x35 2x M10x60	Includes pos. 5

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.

Read Details 2


¹ Available also in maintenance kit. Check chapter 4.1.

² Available also in maintenance kit. Check chapter 4.2.

³ Available also in maintenance kit. Check chapter 4.3.

⁴ Available also in maintenance kit. Check chapter 4.4.

1.1. OIL CHAMBER ASSEMBLY

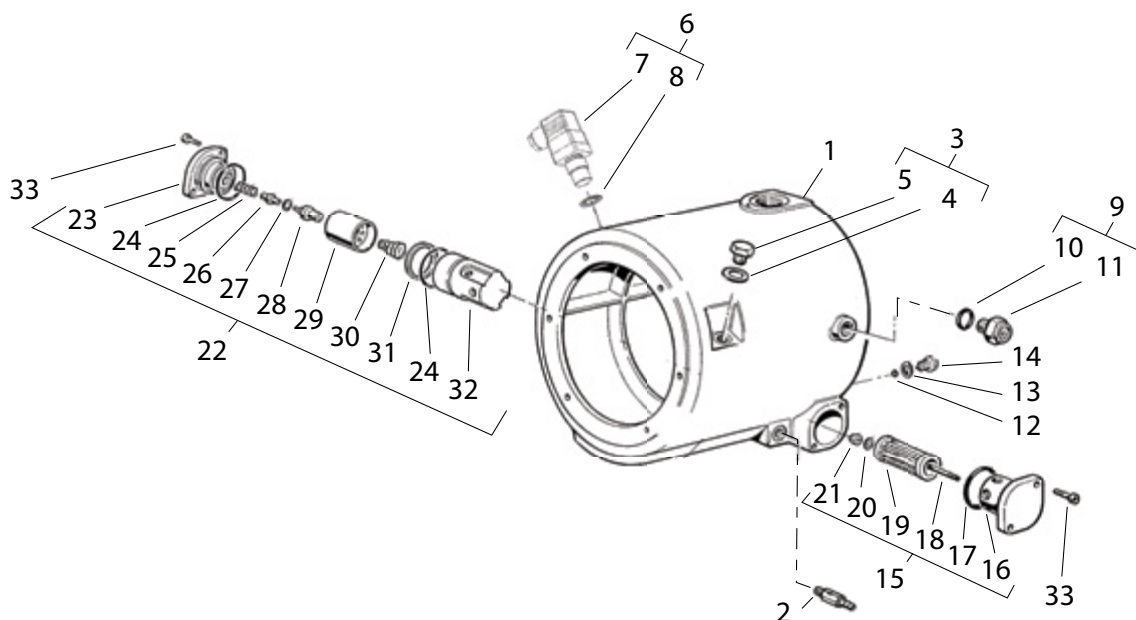

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
1	V106 2600 13	1	OIL CHAMBER BODY		
2	V106 2600 14	1	DRAIN COCK		
3	V106 2600 16		OIL FILLER PLUG KIT		Includes pos. 4-5
4	* 1, 2	1	USIT		
5	*	1	OIL FILLER PLUG		
6	V106 2600 21	1	TEMPERATURE SWITCH	110°C	Includes pos. 7-8
6	V106 2600 22	1	TEMPERATURE SWITCH	130°C	Includes pos. 7-8
7	*	1	TEMPERATURE SWITCH		
8	* 2	1	O-RING	17.86x2.62	
9	V106 2600 15	1	OIL LEVEL SIGHT		Includes pos. 10-11
10	* 2	1	O-RING	23.47x2.62	
11	* 2	1	SIGHT GLASS		
12	* 2	1	GASKET		
13	* 2	1	USIT		
14	*	1	SCREW		
15	V106 2600 19		OIL FILTER KIT		Includes pos. 16-21
16	*	1	FILTER COVER		
17	*1, 2	1	O-RING	44.12x2.62	
18	* 2	1	STUD		
19	V106 2600 20 ¹	1	OIL FILTER ELEMENT		Includes pos. 17, 20-21

SPARE PARTS

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
20	* 2	1	WASHER	M5	
21	* 1, 2	1	NUT	M5	
22	V106 2600 17		THERMOSTATIC VALVE ASSEMBLY		Includes pos. 23-32
23	*	1	VALVE COVER		
24	* 1, 2	2	O-RING	44.12x2.62	
25	* 2	1	SPRING		
26	* 1	1	PISTON		
27	*	1	SNAP RING		
28	V106 2600 99 ¹	1	THERMOSTATIC ELEMENT		
29	* 2	1	PISTON		
30	* 2	1	SPRING		
31	* 1, 2	1	SCRAPER RING		
32	*	1	VALVE BODY		
33	*	4	SCREW	M8x20	Available in Screw Kit B
	V106 2600 18		SCREW KIT B	4x M8x20	Includes pos. 33

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.

Read Details 2


¹ Available also in maintenance kit. Check chapter 4.1.

² Available also in maintenance kit. Check chapter 4.2.

³ Available also in maintenance kit. Check chapter 4.3.

⁴ Available also in maintenance kit. Check chapter 4.4.

1.2. ROTOR & STATOR ASSEMBLY

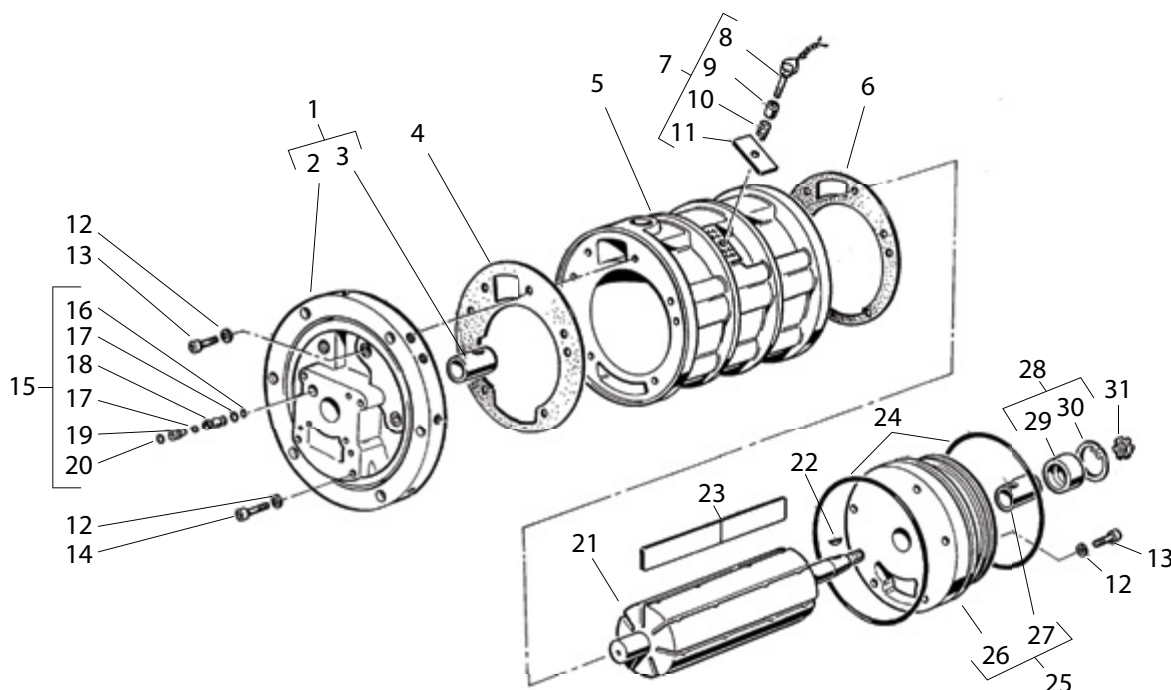

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
	V106 2600 23		ROTOR & STATOR ASSEMBLY		Includes pos. 1-31
1	V106 2600 27		REAR COVER ASSEMBLY		Includes pos. 2-3
2	*	1	COVER		
3	*	1	BUSH		
4	* 2	1	SHIM	0,050	
5	V106 2600 26		STATOR		
6	* 2	1	SHIM	0,050	
7	V106 2600 29		OIL DRAIN VALVE ASSEMBLY		Includes pos. 8-11
8	*	2	SCREW		
9	*	2	COLLAR		
10	*	2	SPRING		
11	*	2	PLATE		
12	*	10	SPRING WASHER		Available in Screw Kit C
13	*	8	SCREW	M10x35	Available in Screw Kit C
14	*	2	SCREW	M10x60	Available in Screw Kit C
15	V106 2600 30		PRESSURE EXHAUST VALVE ASSEMBLY		Includes pos. 16-20
16	* 4	1	O-RING	2.57x1.78	
17	* 4	2	O-RING	8.73x1.78	
18	* 1	1	VALVE SEAT		
19	*	1	PISTON		

SPARE PARTS

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
20	* ⁴	1	SEAL		
21	V106 2600 24	1	ROTOR		
22	V106 2600 33	1	KEY	8x11	
23	V106 2600 25		BLADE KIT		
24	V106 2600 36 ²	2	O-RING	164.47x5.34	
25	V106 2600 28		FRONT COVER ASSEMBLY		Includes pos. 26-27
26	*	1	COVER		
27	*	1	BUSH		
28	V106 2600 34 ¹	1	SHAFT SEAL KIT		Includes pos. 29-30
29	* ²	1	SHAFT SEAL		
30	* ²	1	SNAP RING	60.04x1.78	
31	V106 2600 32 ²	1	RING NUT	M25x1,5	
	V106 2600 31		SCREW KIT C	6x M8x20 10x M10 Spring Washer 10x M10x35 2x M10x60	Includes pos. 12-14

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.

Read Details 2


¹ Available also in maintenance kit. Check chapter 4.1.

² Available also in maintenance kit. Check chapter 4.2.

³ Available also in maintenance kit. Check chapter 4.3.

⁴ Available also in maintenance kit. Check chapter 4.4.

1.3. VALVES

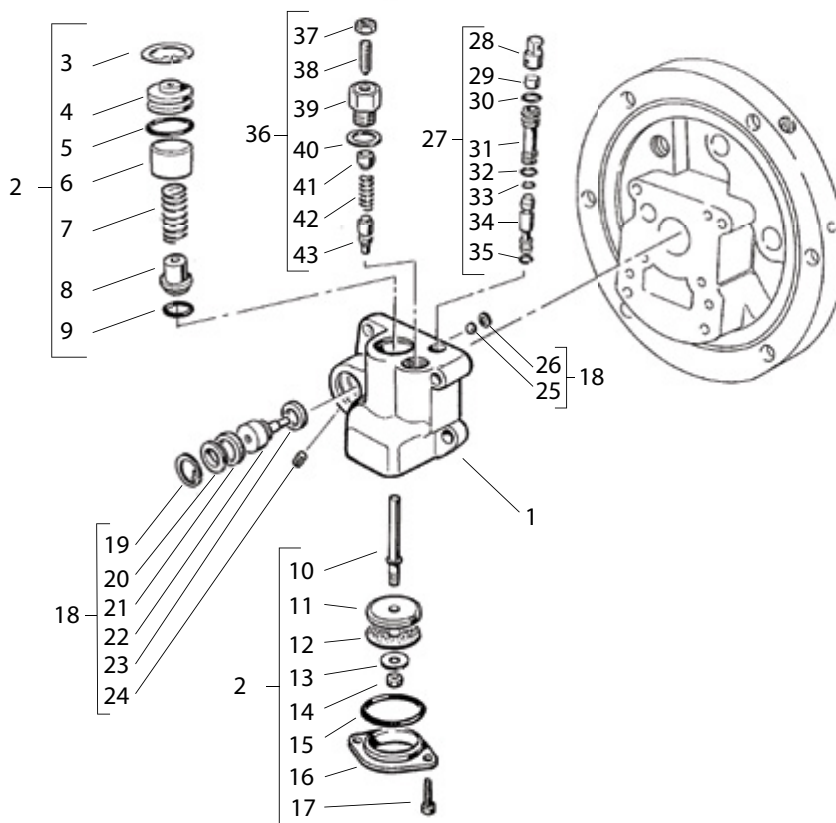

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
	V106 2600 06		VALVE BLOCK ASSEMBLY		Includes pos. 1-43 + pos.14-16 in Chapter 1
1	*	1	VALVE BLOCK BODY		
2	V106 2600 41		INTAKE VALVE KIT		Includes pos. 3-17
3	*	1	SNAP RING		
4	*	1	BOTTOM		
5	*	1	O-RING	25.07x2.62	
6	*	1	PISTON		
7	* 4	1	SPRING		
8	*	1	BUSH		
9	* 4	1	SNAP RING		
10	*	1	STEM		
11	*	1	WASHER		
12	* 4	1	SEAL WASHER		
13	*	1	WASHER		
14	* 4	1	NUT	M6	
15	* 4	1	O-RING	34.60x2.62	
16	*	1	VALVE SEAT		
17	*	2	SCREW	M6x16	

SPARE PARTS

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
18	V106 2600 44		VACUUM VALVE RELIEF KIT		Includes pos. 19-26
19	*	1	SNAP RING		
20	* ⁴	1	WASHER		
21	* ⁴	1	SEAL WASHER		
22	*	1	PISTON		
23	* ⁴	1	SEAL WASHER		
24	*	1	PLUG	M6	
25	*	1	BALL		
26	*	1	WASHER		
27	V106 2600 43		OFF LOAD VALVE KIT		Includes pos. 28-35
28	*	1	CAP		
29	*	1	PISTON		
30	*	1	O-RING	9.25x1.78	
31	*	1	VALVE SEAT		
32	* ⁴	1	O-RING	9.00x1.00	
33	* ⁴	1	O-RING	3.69x1.78	
34	*	1	DOWEL		
35	*	1	O-RING	3.69x1.78	
36	V106 2600 42		SERVO VALVE KIT		Includes pos. 37-43
37	*	1	NUT	M8	
38	*	1	SCREW	M8x30	
39	*	1	CAP		
40	* ⁴	1	WASHER		
41	* ⁴	1	PISTON		
42	* ⁴	1	SPRING		
43	* ⁴	1	PISTON		

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.

Read Details 2


¹ Available also in maintenance kit. Check chapter 4.1.

² Available also in maintenance kit. Check chapter 4.2.

³ Available also in maintenance kit. Check chapter 4.3.

⁴ Available also in maintenance kit. Check chapter 4.4.

1.4. OIL SEPARATOR ASSEMBLY

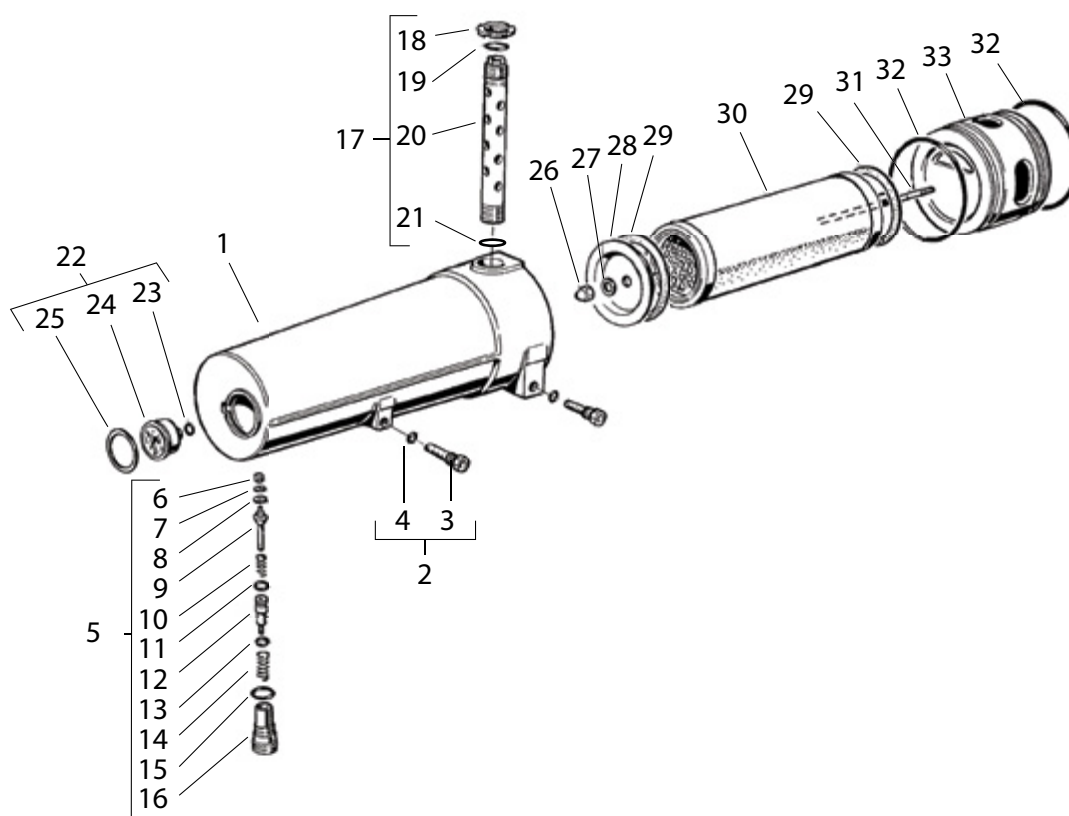

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
	V106 2600 10		OIL SEPARATOR ASSEMBLY		Includes pos. 1-16, 22-33
1	V106 2600 54		OIL SEPARATOR BODY		
2	V106 2600 37 ¹		OIL RETURN VALVE KIT		Includes pos. 3-4
3	* 1, 3	2	OIL RETURN VALVE		
4	* 1, 3	2	O-RING	12.42x1.78	
5	V106 2600 45		NON-RETURN VALVE ASSEMBLY		Includes pos. 6-16
6	* 3, 4	1	NUT	M5	
7	*	1	WASHER		
8	* 3	1	SEAL WASHER		
9	*	1	PISTON		
10	* 3, 4	1	SPRING		
11	* 3, 4	1	O-RING	10.78x2.62	
12	*	1	PISTON		
13	* 3, 4	1	SHIM		
14	* 3, 4	1	SPRING		
15	* 3, 4	1	O-RING	25.07x2.62	
16	*	1	VALVE HOUSING		

SPARE PARTS

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
17	V106 2600 46		OIL SEPARATOR MOUNTING KIT		Includes pos. 18-21
18	* ³	1	RING NUT	M25x1,5	
19	* ³	1	O-RING	22.00x2.62	
20	*	1	MOUNTING PIPE		
21	*	1	O-RING	32.99x2.62	Available in O-Ring Kit A
22	V106 2600 47		PRESSURE GAUGE KIT		Includes pos. 23-25
23	* ³	1	O-RING	6.07x1.75	
24	*	1	PRESSURE GAUGE		
25	*	1	SNAP RING		
26	* ³	1	NUT	M8	Available in O-Ring Kit E
27	* ³	1	USIT	M8	Available in O-Ring Kit E
28	V106 2600 68	1	SEPARATOR FLANGE		
29	* ³	2	O-RING	82.22x2.62	Available in O-Ring Kit E
30	* ³	1	SEPARATOR ELEMENT		
31	V106 2600 69	1	STUD		
32	* ²	2	O-RING	123.40x3.53	Available in O-Ring Kit E
33	V106 2600 67	1	COVER		
	V106 2600 12		O-RING KIT A	1x 32.99x2.62 1x 190.18x2.62 1x 7.66x1.78 1x 164.77x2.68	Includes pos. 21
	V106 2600 75		O-RING KIT E	4x M8 Nut 4x M8 Usit 2x 82.22x2.62 2x 123.40x3.53	Includes pos. 26, 27, 29, 32

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.

Read Details 2


¹ Available also in maintenance kit. Check chapter 4.1.

² Available also in maintenance kit. Check chapter 4.2.

³ Available also in maintenance kit. Check chapter 4.3.

⁴ Available also in maintenance kit. Check chapter 4.4.

1.5. OIL COOLER ASSEMBLY

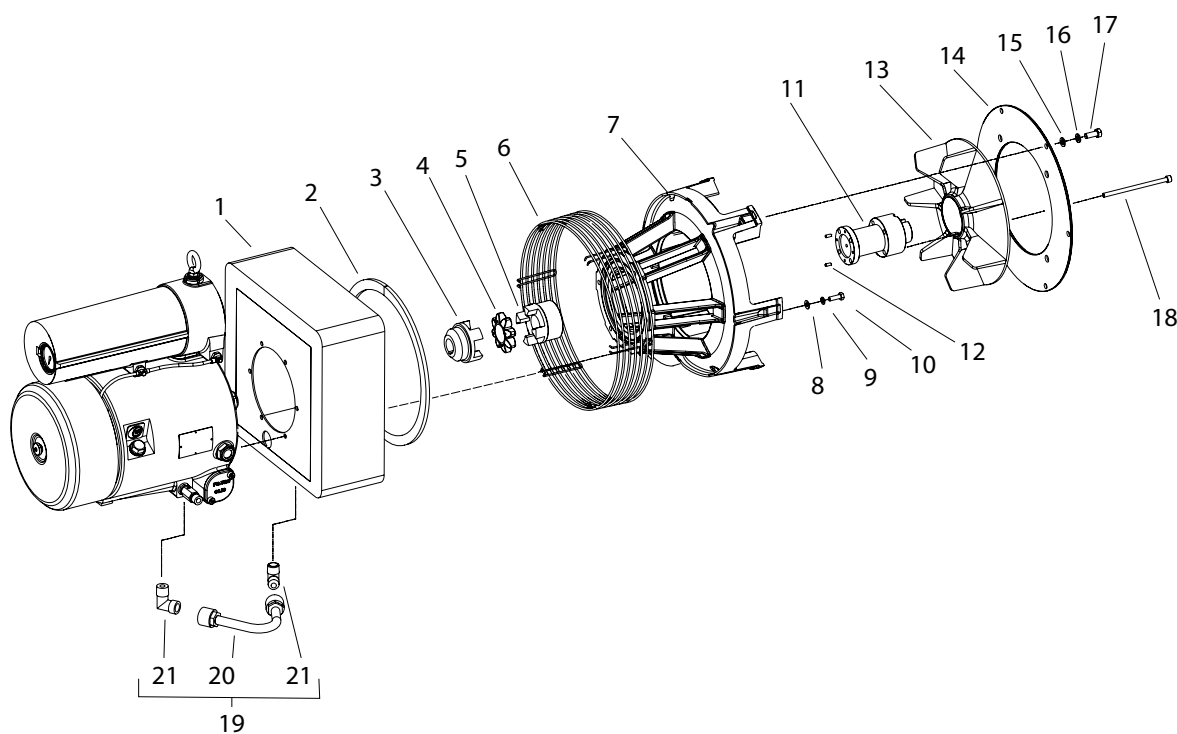

SPARE PARTS

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
1	V106 2600 55	1	OIL COOLER		Includes pos. 2
2	*	1	GASKET	1,1m	
3	V106 2600 60	1	COUPLING HUB	Rotor side	
4	V106 2600 61 ²	1	SPIDER		
5	V106 2600 62	1	COUPLING HUB	Motor side	
6	V106 2600 57	1	FAN GUARD		
7	V106 2600 59	1	SUPPORT FRAME		
8	*	6	WASHER	M8	Available in Screw Kit F
9	*	6	SPRING WASHER	M8	Available in Screw Kit F
10	*	6	SCREW	M8x25	Available in Screw Kit F
11	V106 2600 63	1	FAN HUB		
12	*	4	PIN	5x12	Available in Screw Kit F
13	V106 2600 58	1	FAN		
14	V106 2600 38	1	FLANGE		
15	*	6	WASHER	M10	Available in Screw Kit F
16	*	6	SPRING WASHER	M10	Available in Screw Kit F
17	*	6	SCREW	M10x25	Available in Screw Kit F
18	*	4	SCREW	M8x145	
19	V106 2600 56		OIL COOLER PIPE KIT		Includes pos. 20-21
20	*	2	PIPE ASSEMBLY	15L	
21	*	4	ELBOW FITTING	1/2RK-15L	
	V106 2600 64		SCREW KIT F	6x Washer 6x Spring Washer 6x M8x25 6x Washer 6x Spring Washer 6x M10x20 4x M8x145	Includes pos. 8-10, 12, 15-17

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.

Read Details 2


¹ Available also in maintenance kit. Check chapter 4.1.

² Available also in maintenance kit. Check chapter 4.2.

³ Available also in maintenance kit. Check chapter 4.3.

⁴ Available also in maintenance kit. Check chapter 4.4.

2. DRIVE KIT

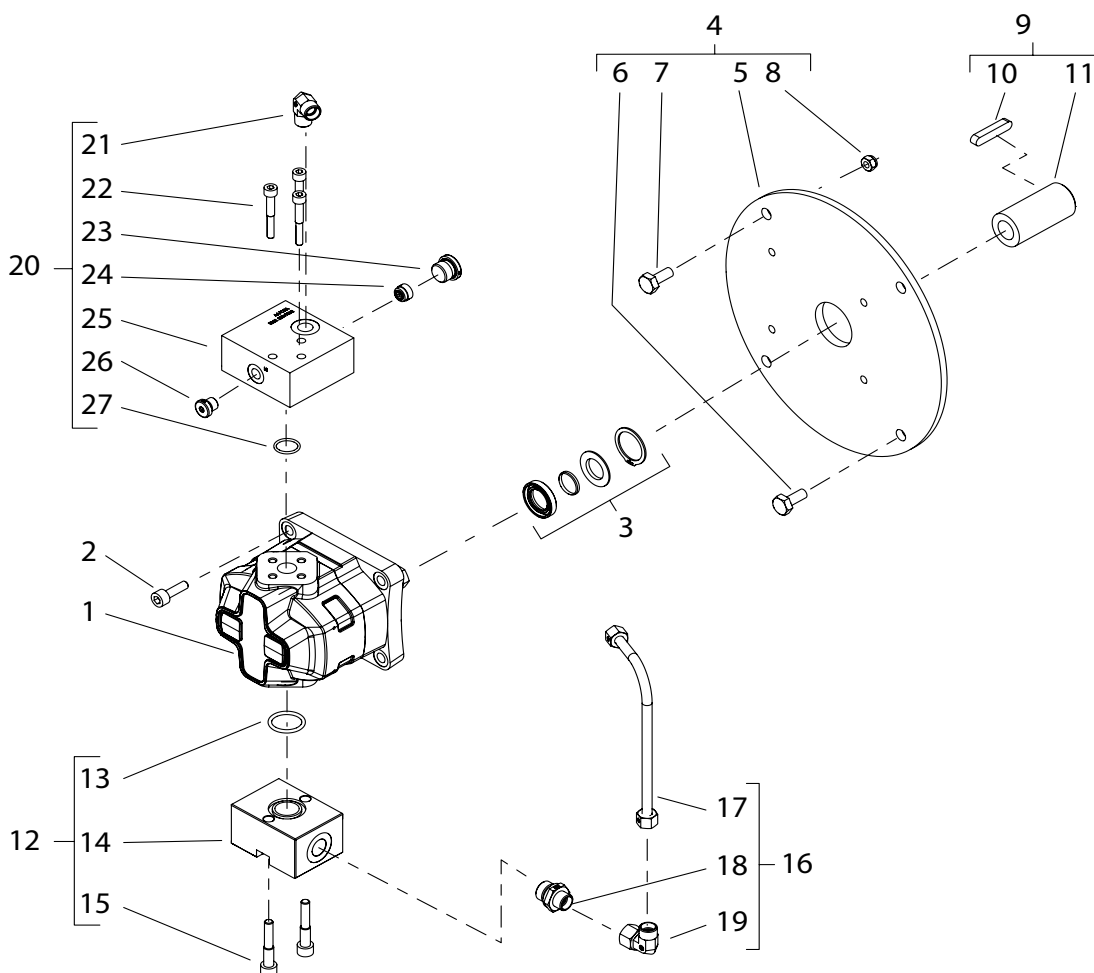

SPARE PARTS

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
	V106 2600 95		DRIVE KIT	HKL 2600/8-65	Includes pos. 1-27
	V106 2600 97		DRIVE KIT	HKL 2600/8-82	Includes pos. 1-27
1	V106 2600 90		HYDRAULIC MOTOR	HKL 2600/8-65	Includes pos. 2
1	V106 2600 92		HYDRAULIC MOTOR	HKL 2600/8-82	Includes pos. 2
2	*	4	SCREW	M8x25	
3	V100 1032 50		SHAFT SEAL KIT		
4	V106 2600 85		BELL HOUSING		Includes pos. 5-8
5	*	1	BELL HOUSING		
6	*	2	SCREW	M12x30	
7	*	2	SCREW	M12x25	
8	*	4	NUT	M12	
9	V106 2600 84		COUPLING		
10	*	1	COUPLING		
11	*	1	KEY	10x8x50	
12	V106 2600 83		RETURN BLOCK KIT		Includes pos. 13-15
13	*	1	O-RING	29.75x3.53	
14	*	1	RETURN BLOCK		
15	*	2	SCREW	M10x25	
16	V106 2600 80		BY-PASS PIPE KIT		Includes pos. 17-19
17	*	1	PIPE ASSEMBLY		
18	*	1	ELBOW FITTING	L12	
19	*	1	FITTING	12L R1/2	
20	V106 2600 82		CHECK VALVE BLOCK KIT		Includes pos. 21-27
21	*	3	SCREW	M8x55	
22	*	1	ELBOW FITTING	12L RK3/8	
23	*	1	PLUG	R1/2	
24	*	1	CHECK VALVE BLOCK		
25	V106 2600 81	1	CHECK VALVE CARTRIDGE		
26	*	1	PLUG	R1/4	
27	*	1	O-RING	21.30x2.40	

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.

Read Details 2


¹ Available also in maintenance kit. Check chapter 4.1.

² Available also in maintenance kit. Check chapter 4.2.

³ Available also in maintenance kit. Check chapter 4.3.

⁴ Available also in maintenance kit. Check chapter 4.4.

3. O-PE SWITCH

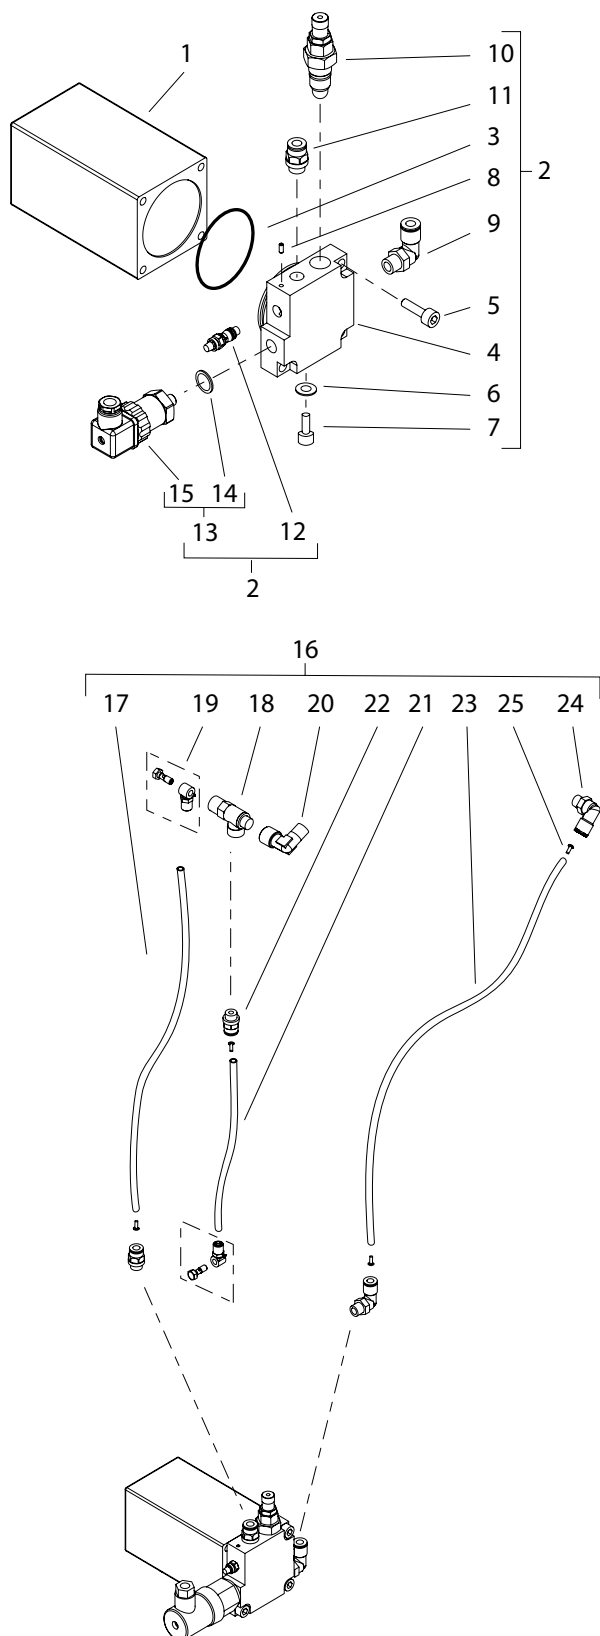

SPARE PARTS

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
	V106 2600 70		O-PE SWITCH		Includes pos. 1-16
1	V106 2600 74		HOUSING		Includes pos. 3
2	V106 2600 73		CAP		Includes pos. 3-16
3	*	1	O-RING	44.12x2.62	
4	*	1	COVER HEAD		
5	*	3	SCREW	M6x20	
6	*	2	WASHER	M6	
7	*	2	SCREW	M6x10	
8	*	1	SET SCREW	M3x6	
9	*	1	PNE ELBOW FITTING	6/4-R1/8u	
10	*	1	PILOT VALVE	R1/4	
11	*	1	PNE FITTING	6/4-R1/8	
12	V106 2600 72	1	PNE THROTTLE CHECK VALVE	M5	
13	V106 2600 71		O-PE PRESSURE SWITCH		Includes pos. 14-16
14	*	1	USIT	R1/8	
15	*	1	PNE PRESSURE SWITCH	R1/8u	
16	V106 2600 35		O-PE INSTALLATION KIT		Includes pos. 18-26
17	*	1	PIPE (0,45m)	6/4	
18	*	1	CHECK VALVE	R1/8	
19	*	2	BANJO FITTING		
20	*	1	ELBOW UNION	RK1/8u-R1/8s	
21	*	1	PIPE (0,21m)	6/4	
22	*	1	FITTING		
23	*	1	PIPE (0,47m)	6/4	
24	*	2	ELBOW FITTING		
25	*	4	FERRULE	6/4	

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.

Read Details 2

¹ Available also in maintenance kit. Check chapter 4.1.

² Available also in maintenance kit. Check chapter 4.2.

³ Available also in maintenance kit. Check chapter 4.3.

⁴ Available also in maintenance kit. Check chapter 4.4.

4. MAINTENANCE KITS

4.1. GENERAL

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
	V106 2600 50		MAINTENANCE KIT GENERAL		Includes pos. 1-10
1	*	1	INTAKE FILTER ELEMENT		pos. 22 in chapter 1
2	*	1	GASKET		pos. 26 in chapter 1
3	*	1	USIT		pos. 4 in chapter 1.1
4	*	3	O-RING	44.12x2.62	pos. 17, 24 in chapter 1.1
5	*	1	OIL FILTER ELEMENT		pos. 19 in chapter 1.1
6	*	1	NUT	M5	pos. 21 in chapter 1.1
7	*	1	TERMOSTATIC ELEMENT		pos. 28 in chapter 1.1
8	*	1	SCRAPER RING		pos. 31 in chapter 1.1
9	*	2	OIL-RETURN VALVE		pos. 3 in chapter 1.4
10	*	2	O-RING	12.42x1.78	pos. 4 in chapter 1.4

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.

Read Details 2

4.2. ROTOR - STATOR

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
	V106 2600 51		MAINTENANCE KIT ROTOR - STATOR		Includes pos. 1-34
1	*	1	O-RING	190.18x2.62	pos. 6 in chapter 1
2	*	1	O-RING	7.66x1.78	pos. 7 in chapter 1
3	*	1	USIT		pos. 10 in chapter 1
4	*	1	SILENCER		pos. 11 in chapter 1
5	*	1	GASKET	0,050	pos. 14 in chapter 1
6	*	1	O-RING	164.77x2.62	pos. 18 in chapter 1
7	*	1	USIT		pos. 4 in chapter 1.1
8	*	1	O-RING	17.86x2.62	pos. 8 in chapter 1.1
9	*	1	O-RING	23.47x2.62	pos. 10 in chapter 1.1
10	*	1	SIGHT GLASS		pos. 11 in chapter 1.1
11	*	1	GASKET	0,100	pos. 12 in chapter 1.1
12	*	1	USIT		pos. 13 in chapter 1.1
13	*	3	O-RING	44.12x2.62	pos. 17, 24 in chapter 1.1
14	*	1	STUD		pos. 18 in chapter 1.1
15	*	1	OIL FILTER ELEMENT		pos. 19 in chapter 1.1
16	*	1	WASHER	M5	pos. 20 in chapter 1.1
17	*	1	NUT	M5	pos. 21 in chapter 1.1
18	*	1	SPRING		pos. 25 in chapter 1.1
19	*	1	PISTON		pos. 29 in chapter 1.1
20	*	1	SPRING		pos. 30 in chapter 1.1
21	*	1	SCRAPER RING		pos. 31 in chapter 1.1
22	*	1	SHIM	0,050	pos. 4 in chapter 1.2
23	*	1	SHIM	0,050	pos. 4 in chapter 1.2
24	*	1	SHIM	0,050	pos. 6 in chapter 1.2
25	*	1	SHIM	0,100	pos. 6 in chapter 1.2
26	*	1	SHIM	0,075	pos. 6 in chapter 1.2
27	*	1	SHIM	0,050	pos. 6 in chapter 1.2
28	*	1	SHIM	0,100	pos. 6 in chapter 1.2
29	*	1	SHIM	0,075	pos. 6 in chapter 1.2
30	*	2	O-RING	164.47x5.34	pos. 24 in chapter 1.2
31	*	1	SHAFT SEAL		pos. 29 in chapter 1.2
32	*	1	SNAP RING		pos. 30 in chapter 1.2
33	*	1	RING NUT	M25x1,5	pos. 31 in chapter 1.2
34	*	1	SPIDER		pos. 4 in chapter 1.5

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.
Read Details 2

4.3. OIL SEPARATOR

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
	V106 2600 39		MAINTENANCE KIT OIL SEPARATOR		Includes pos. 1-18
1	*	1	O-RING	32.99x2.62	pos. 2 in chapter 1
2	*	2	PIPE KIT		pos. 4 in chapter 1
3	*	2	OIL-RETURN VALVE		pos. 3 in chapter 1.4
4	*	2	O-RING	12.42x1.78	pos. 4 in chapter 1.4
5	*	1	NUT	M5	pos. 6 in chapter 1.4
6	*	1	SEAL WASHER		pos. 8 in chapter 1.4
7	*	1	SPRING		pos. 10 in chapter 1.4
8	*	1	O-RING	10.78x2.62	pos. 11 in chapter 1.4
9	*	1	SHIM		pos. 14 in chapter 1.4
10	*	1	O-RING	25.07x2.62	pos. 15 in chapter 1.4
11	*	1	RING NUT	M25x1,5	pos. 18 in chapter 1.4
12	*	1	O-RING	22.00x2.62	pos. 19 in chapter 1.4
13	*	1	O-RING	6.07x1.78	pos. 23 in chapter 1.4
14	*	1	NUT	M8	pos. 26 in chapter 1.4
15	*	1	USIT		pos. 27 in chapter 1.4
16	*	2	O-RING	82.22x2.62	pos. 29 in chapter 1.4
17	*	1	SEPARATOR ELEMENT		pos. 30 in chapter 1.4
18	*	2	O-RING	123.40x3.53	pos. 32 in chapter 1.4

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.

Read Details 2

4.4. VALVE ASSEMBLY

POS	PART NUMBER	QTY	DESCRIPTION	DETAILS	DETAILS 2
	V106 2600 52		MAINTENANCE KIT VALVE ASSEMBLY		Includes pos. 1-28
1	*	1	USIT		pos. 10 in chapter 1
2	*	1	SILENCER		pos. 11 in chapter 1
3	*	1	GASKET		pos. 14 in chapter 1
4	*	1	O-RING	164.77x2.62	pos. 18 in chapter 1
5	*	1	O-RING	2.57x1.78	pos. 16 in chapter 1.2
6	*	2	O-RING	8.73x1.78	pos. 17 in chapter 1.2
7	*	1	SEAL		pos. 20 in chapter 1.2
8	*	1	SPRING		pos. 7 in chapter 1.3
9	*	1	SNAP RING		pos. 9 in chapter 1.3
10	*	1	SEAL WASHER		pos. 12 in chapter 1.3
11	*	1	NUT	M6	pos. 14 in chapter 1.3
12	*	1	O-RING	34.60x2.62	pos. 15 in chapter 1.3
13	*	1	WASHER		pos. 20 in chapter 1.3
14	*	1	SEAL WASHER		pos. 21 in chapter 1.3
15	*	1	SEAL WASHER		pos. 23 in chapter 1.3
16	*	1	O-RING	9.00x1.00	pos. 32 in chapter 1.3
17	*	1	O-RING	3.69x1.78	pos. 33 in chapter 1.3
18	*	1	WASHER		pos. 40 in chapter 1.3
19	*	1	PISTON		pos. 41 in chapter 1.3
20	*	1	SPRING		pos. 42 in chapter 1.3
21	*	1	PISTON		pos. 43 in chapter 1.3
22	*	1	NUT	M5	pos. 6 in chapter 1.4
23	*	1	SEAL WASHER		pos. 8 in chapter 1.4
24	*	1	SPRING		pos. 10 in chapter 1.4
25	*	1	O-RING	10.78x2.62	pos. 11 in chapter 1.4
26	*	1	SHIM		pos. 13 in chapter 1.4
27	*	1	SPRING		pos. 14 in chapter 1.4
28	*	2	O-RING	25.07x2.62	pos. 15 in chapter 1.4

* Not sold separately. Available only in kit or assembly described above or presented in separate part list.
Read Details 2



Menotie 3
FI-33470 Ylöjärvi, Finland
tel: +358 3 3488 200
info@dynaset.com



ELECTRICITY

HG Hydraulic Generator
HGV POWER BOX Variable Hydraulic Generator System
HGV Variable Hydraulic Generator System
HWG Hydraulic Welding Generator
HGG Hydraulic Ground Power Generator



HIGH PRESSURE WATER

HPW Hydraulic High Pressure Water Pump
HPW Hydraulic Power Washer
KPL High Pressure Street Washing Unit
HPW-DUST High Pressure Dust Suppression System
PPL High Pressure Pipe Cleaning Unit
HPW-FIRE High Pressure Firefighting System
FP Fire Fighting Piercing Kit
HDF Hydraulic Drilling Fluid Pump
JPL High Pressure Bin Washing System
HSP Hydraulic Submersible Pump



COMPRESSED AIR

HK Hydraulic Piston Compressor
HKL Hydraulic Rotary Vane Compressor
HKR Hydraulic Screw Compressor



MAGNET POWER

HMG PRO Hydraulic Magnet Generator
MAG Lift Magnet
HMAG PRO Hydraulic Magnet



VIBRATION

HVB Hydraulic Vibration Pump
HVD Hydraulic Directional Vibra
HVC Hydraulic Vibration Compactor
HRC Hydraulic Reversal Cylinder



POWER BOOSTING

HPI Hydraulic Pressure Intensifier
HPI-C Hydraulic Pressure Intensifier for Cylinder



KNOW-HOW

Hydraulic Power Take-off (PTO)
Hydraulic Power Unit Technology
HEU Hydraulic Expansion Unit
HRU Hydraulic Rescue Unit
De-Icing Technology
Installation Valves
HHK Hydraulic Grinder
HV/HVY Hydraulic Winch / Winch Unit

www.dynaset.com

